WHALEN®

LOT NUMBER:_____
DATE PURCHASED:__/__/___

Greenwich Computer Desk (Desk)
Model # SPCA-GDH

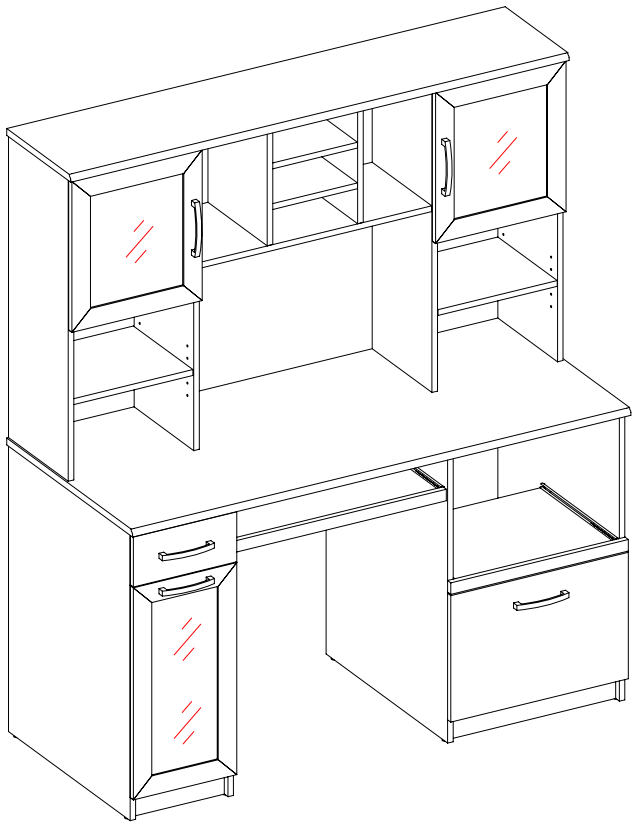

ADULT ASSEMBLY REQUIRED DUE TO THE PRESENCE OF SMALL PARTS, SHARP POINTS, SHARP EDGES AS RECEIVED. 2 PEOPLE RECOMMENDED.

If you have any questions regarding assembly or if parts are missing, DO NOT return this item to the store where it was purchased. Please call our toll-free customer service number and have your instructions and parts list ready to provide the model name, part name or factory number:

1-866-942-5362
Pacific Standard Time: 8:30 a.m. - 4:30 p.m., Monday - Friday
Or visit our web site 24 hours a day, 7 days a week for product assistance at
www.whalenfurniture.com
Or e-mail your request to **parts@whalenfurniture.com**

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Important

Before you begin: Open, identify and count all parts prior to assembly. Lay out parts on a flat and non-abrasive surface. You will need the parts identified on page 4, 5 and 6 of this instruction manual.

NOTE: IT IS VERY IMPORTANT TO USE GLUE WITH DOWELS. EXCESS GLUE CAN BE WIPED OFF WITH DAMP CLOTH.

Insert Dowel at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

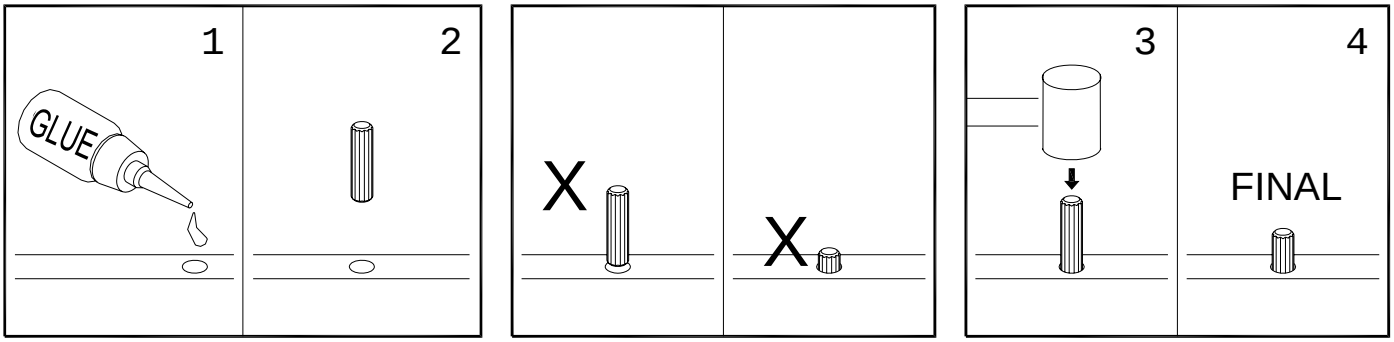

CAM LOCK SYSTEM OPERATION

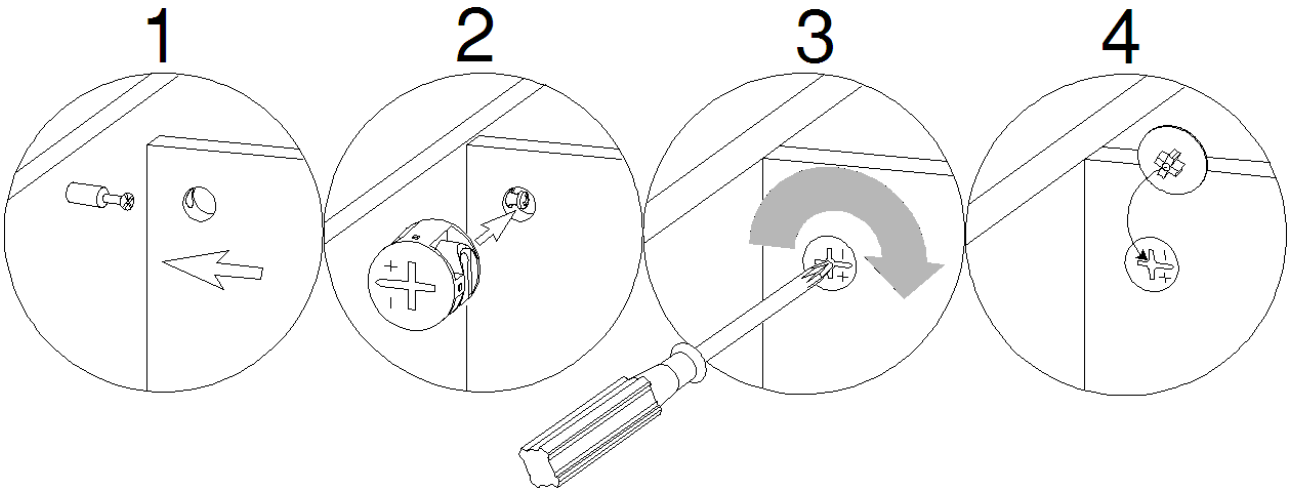

HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS

1. Screw the Cam Bolt into the threaded inserts on the panel. Connect both panels together; making sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
2. Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock faces out and points towards Cam Bolt.
3. Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt in place.
4. Plug the Cam Lock Cover into the cross slot of the Cam Lock to conceal the Cam.

You are now ready to assemble the KD unit.

4-Port USB Desktop Hub User Guide

Please read this user guide before installing and using your integrated desktop hub.

INTRODUCTION

The integrated 4-Port USB 2.0 Desktop Hub offers 480 Mbps high transmission rate and can connect up to three devices, such as a digital camera, MP3 player, cell phone or wireless mouse. With plug-and-play capability, you can add a device without restarting your computer.

INSTALLATION

The hub installs automatically. If necessary, follow the onscreen instructions to complete installation. Once the default drivers are installed, the red LED status indicator light will glow and you can connect devices to the hub.

NOTES

- To reach USB 2.0 high speed, your computer or host adapter card must support USB 2.0. This hub is also backwards compatible with USB 1.1.
- When using the hub with a computer that has a version 1.1 USB interface, all of the devices attached to the hub will run at USB 1.1 speed.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ICES-003.

SYSTEM REQUIRMENTS

- Windows® 98SE/ME/2000/XP/Vista /7
- Pentium 233 MHz or higher
- At least 64 MB RAM
- Available USB port
- Mac OS 9 or later for USB 1.1 mode
- Mac OS X or later for USB 2.0 mode

WARNINGS

! Your hub automatically shuts off any port with a low or excessive current.

! If USB Hub Current Limit Exceeded appears on your screen, disconnect the affected USB device, click Reset on the screen, and reconnect the device.

! If one of your hub ports is disabled, but USB Hub Current Limit Exceeded does not appear:
- Disconnect and reconnect the affected device.
- If the port still does not work, disconnect the hub and the device, and then reconnect.

! Keep your desktop hub dry; if it gets wet, wipe it dry immediately.

! Do not modify or tamper with your desktop hub's internal components. It may cause a malfunction and invalidate its warranty.

! Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

Parts and Hardware List

Please read completely through the instructions and verify that all listed parts and hardware are present before beginning assembly.

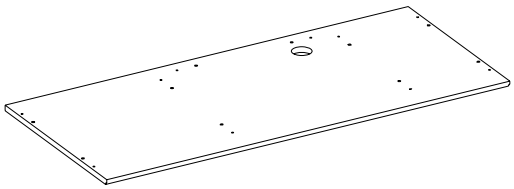

A- Desk Top (1)

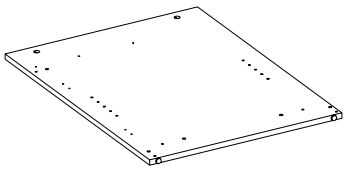

B- Left Pedestal Left Panel (1)

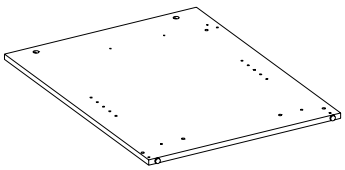

C- Left Pedestal Right Panel (1)

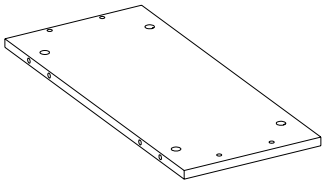

D- Left Pedestal Bottom Panel (1)

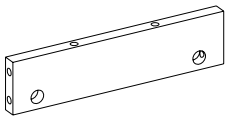

E- Left Pedestal Bottom Stretcher (2)



F- Left Pedestal Middle Crossbar (1)

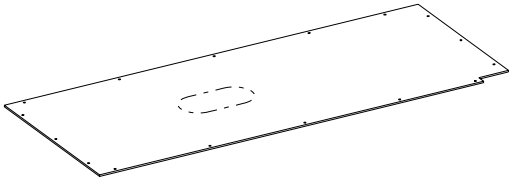

G- Left Pedestal Back Panel (1)

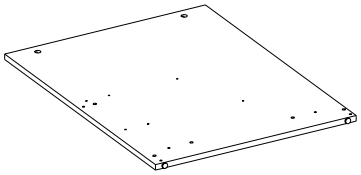

H- Right Pedestal Left Panel (1)

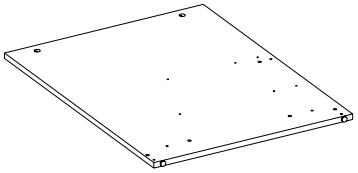

I- Right Pedestal Right Panel (1)

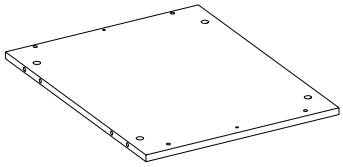

J- Right Pedestal Bottom Panel (1)

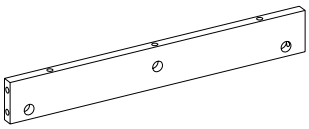

K- Right Pedestal Bottom Stretcher (2)



L- Right Pedestal Middle Crossbar (1)

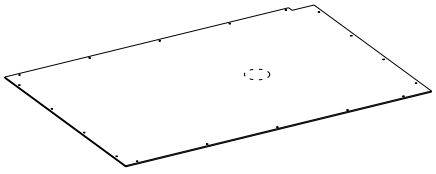

M- Right Pedestal Back Panel (1)

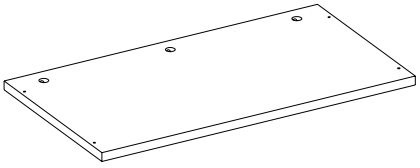

N- Pull-out Tray (1)



N1- Pull-out Tray Molding (1)

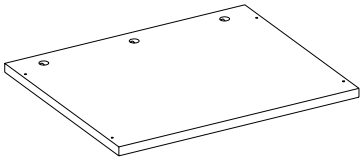

O- Sliding Shelf (1)



O1- Sliding Shelf Molding (1)

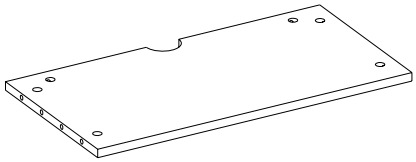

P- Modesty Panel (1)

Please call for replacement parts or assistance: **1-866-942-5362**

Parts and Hardware List

Please read completely through the instructions and verify that all listed parts and hardware are present before beginning assembly.

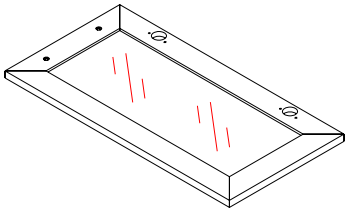

Q- Door Panel (1)

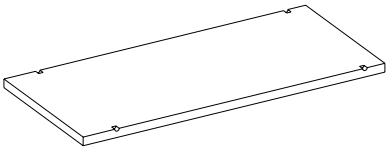

R- Adjustable Shelf (1)

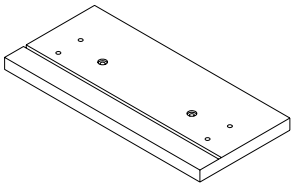

S- Utility Drawer Front (1)

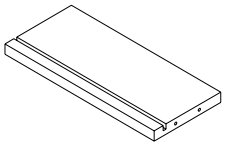

S1- Utility Drawer Back Panel (1)

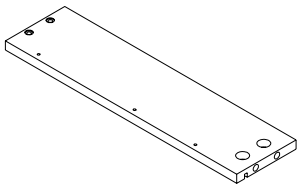

S2- Utility Drawer Left Side (1)

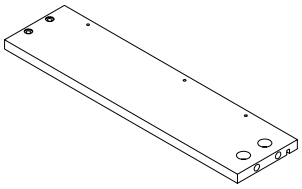

S3- Utility Drawer Right Side (1)

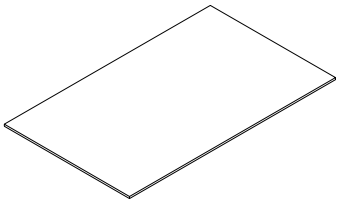

S4- Utility Drawer Bottom Panel (1)

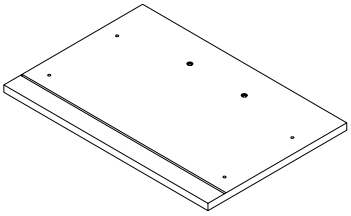

T- File Drawer Front (1)

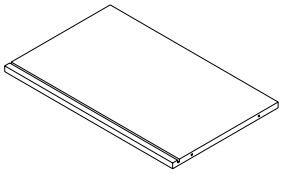

T1- File Drawer Back Panel (1)

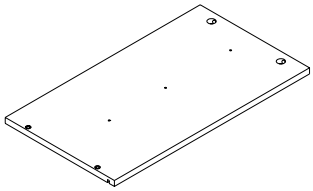

T2- File Drawer Left Side (1)

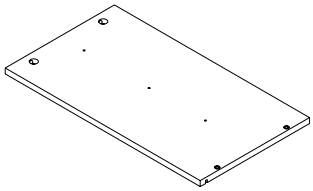

T3- File Drawer Right Side (1)

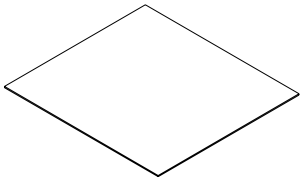

T4- File Drawer Bottom Panel (1)

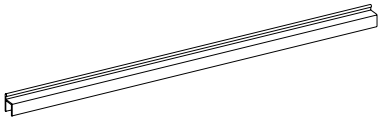

U- Guide Rail (2)



V- File Hanger (2)

W- Guide Block (4)

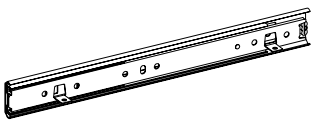

XL- 12” Pull-out Tray Left Slides (1)

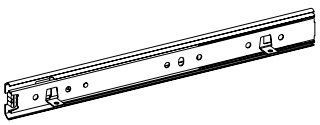

XR- 12” Pull-out Tray Right Slides (1)

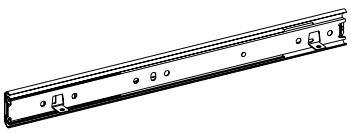

YL- 14” Sliding Shelf Left Slides (1)

Please call for replacement parts or assistance: **1-866-942-5362**

Parts and Hardware List

Please read completely through the instructions and verify that all parts listed are present before beginning assembly.

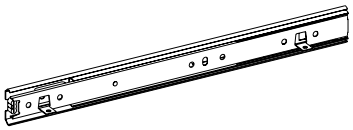

YR- 14” Sliding Shelf Right Slides (1)

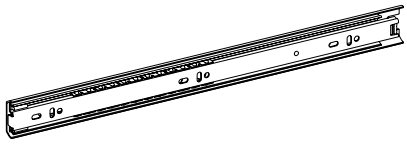

Z- 16” Ball Bearing Slides (2)

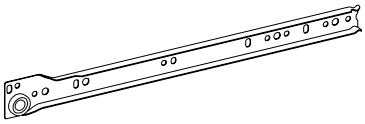

CL- Left Slide Track (1)

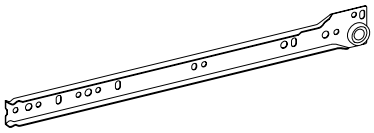

CR- Right Slide Track (1)

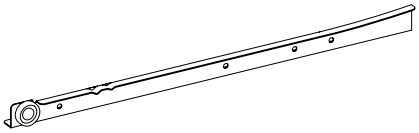

DL- Left Slide Runner (1)

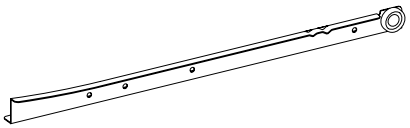

DR- Right Slide Runner (1)

(1) Small Cam Lock
(8+1 extra)

(2) Large Cam Lock
(42+2 extra)



(3) Cam Bolt
(50+2 extra)



(4) M8 x30 mm Wood Dowel
(46+2 extra)



(5) #6 x 1/2” Zinc Screw
(8+1 extra)

(6) #6 x 1/2” Black Screw
(44+2 extra)



(7) #8 x 1-1/4” Screw
(8+1 extra)

(8) 3/4” Ring Shank Nail
(34+1 extra)



(9) Shelf Pin
(4+1 extra)



(10) Cam Lock Cover
(4+1 extra)

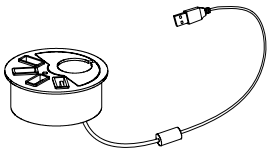

(11) 4-Port USB Hub
(1)

(12) Handle
(3)



(13) Handle Bolt (6+1 extra)

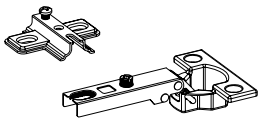

(14) Door Hinge (2 sets)



Glue (1)

Tools required: Phillips screwdriver (not provided).

Utility Drawer Assembling

1. Unpack the unit and confirm that you have all the hardware and required parts. Assembly the unit on a carpeted floor or the empty carton to avoid any scratch.
2. Securely screw 4 Cam Bolts (3) into the designated small holes on the Utility Drawer Front (S), as shown in the illustration.
3. Attach the Utility Drawer Side Panels (S2 and S3) to the Drawer Front (S) by engaging four Small Cam Locks (1) (Refer to page 2 on Cam Lock system operation supplement). Make sure that the grooves face inward and line up with each other.

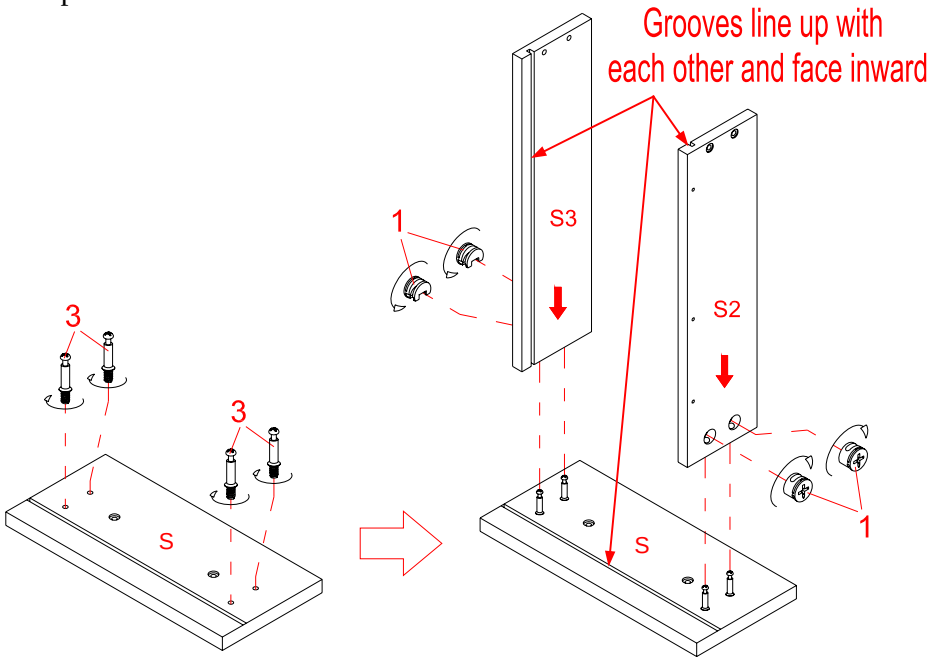

4. Slide the Utility Drawer Bottom Panel (S4) into the grooves between the Drawer Side Panels (S2 and S3) until fully inserted into the Drawer Front (S). Make sure the finished surface will face up.

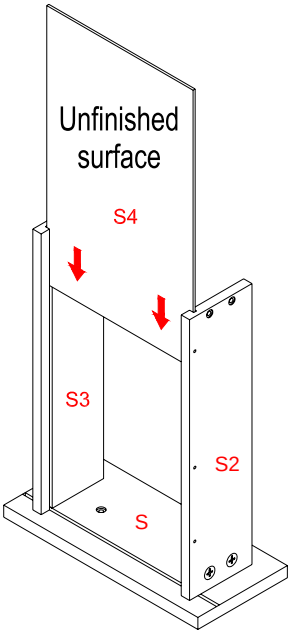

Utility Drawer Assembling

5. Fasten the Utility Drawer Back Panel (S1) to Drawer Side Panels (S2 and S3) using four 1-1/4" Wood Screws (7). Make sure that the Drawer Bottom Panel (S4) fits securely into the groove of the Drawer Back Panel (S1). Tighten all the screws with a Phillips screwdriver.

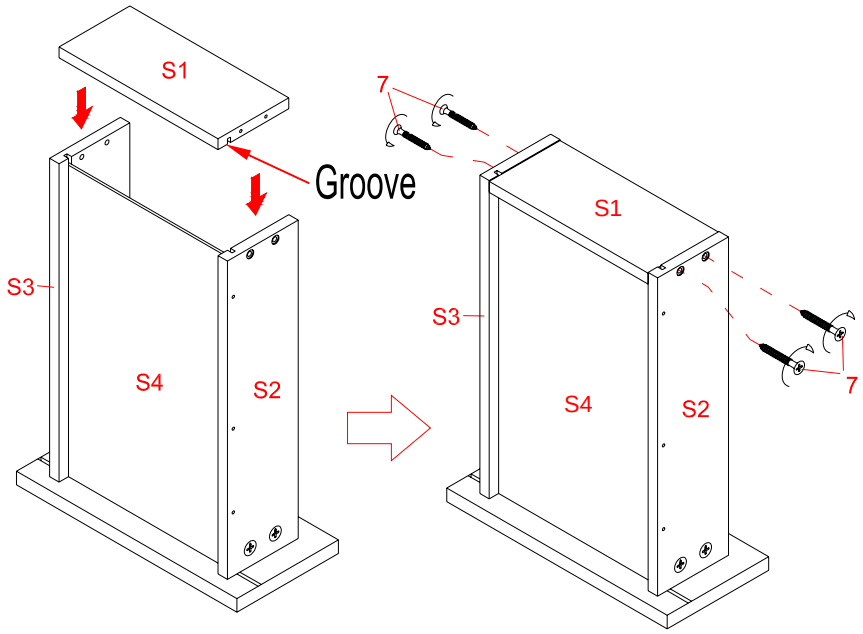

6. Using the pilot holes as a guide, align and attach the Left Slide Runner (DL) to the Drawer Left Side Panel (S2) using three 1/2" Black Screws (6). Make sure that the roller end of Slide Runner faces backward. Tightly fasten with a Phillips screwdriver.

7. Repeat last step to attach the Right Slide Runner (DR) to the Drawer Right Side Panel (S3).

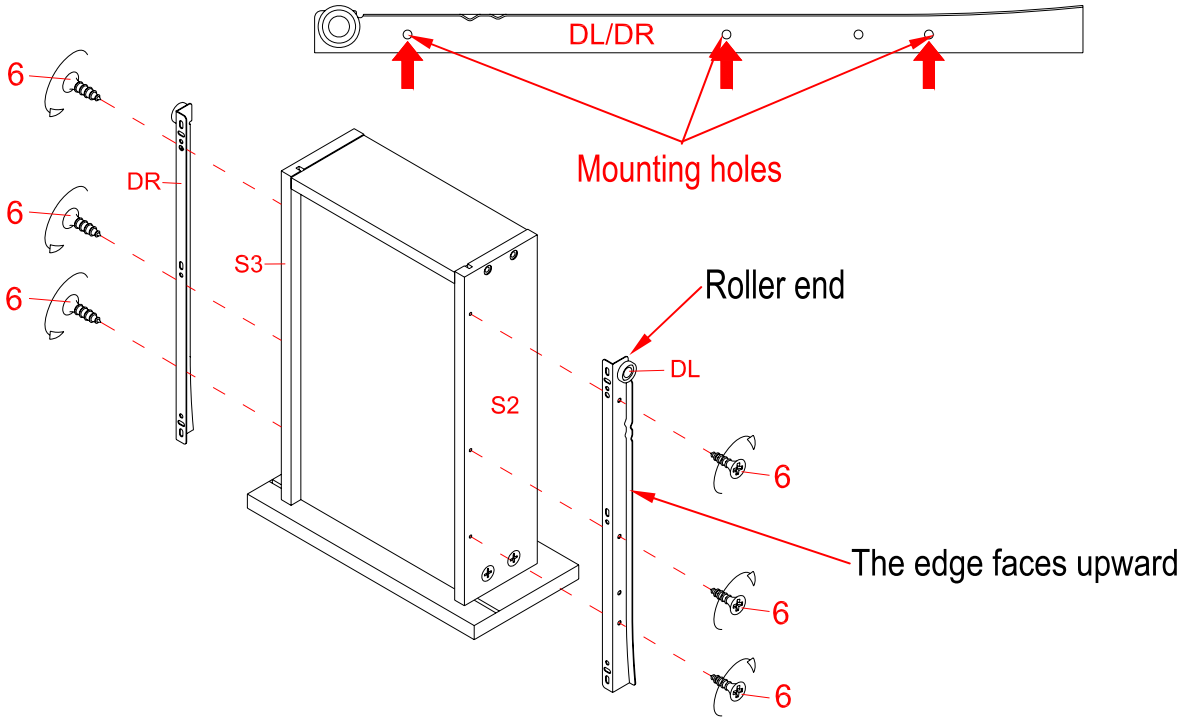

Assembly Instructions

8. Turn the assembled drawer upright.

9. Attach one Handle (12) to the outside of the Drawer Front (S) using two provided Handle Bolts (13).

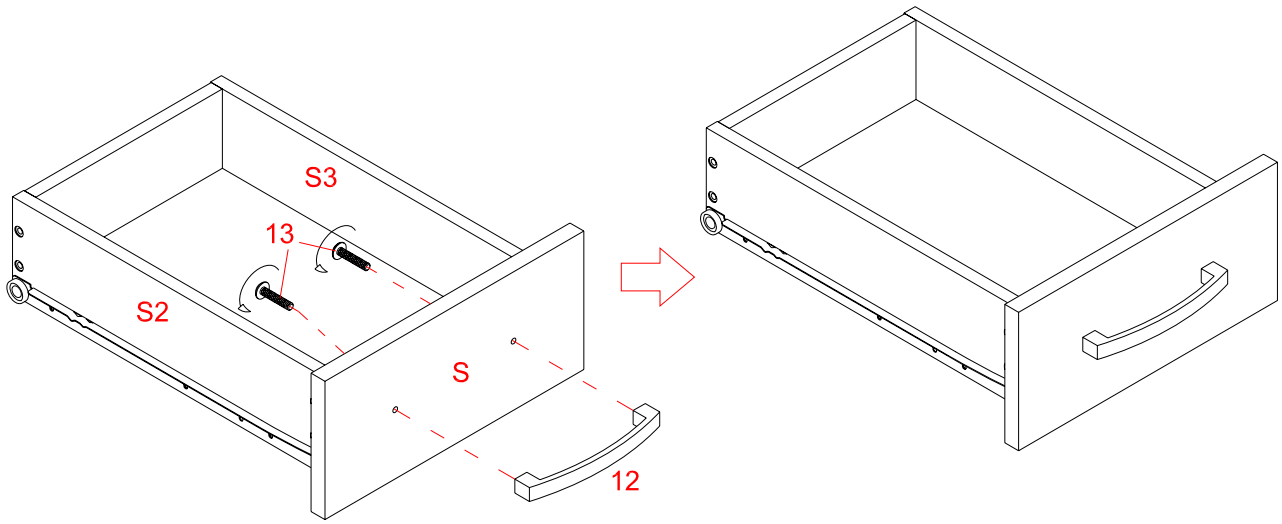

10. Pick up the 16” Ball Bearing Slides (Z) and separate the Slide Runners for the following step. Extend the Slide Runner all the way forward. Press the plastic release lever of the ball bearing slides up and pull the Slide Runner complete out.

11. Attach the separated Slide Runners (Z) to the File Drawer Left and Right Side Panels (T2 and T3) respectively with three 1/2” Black Screws (6) per slide runner. Make sure that the closed end of the Slide Runner against the front edge of drawer side panel.

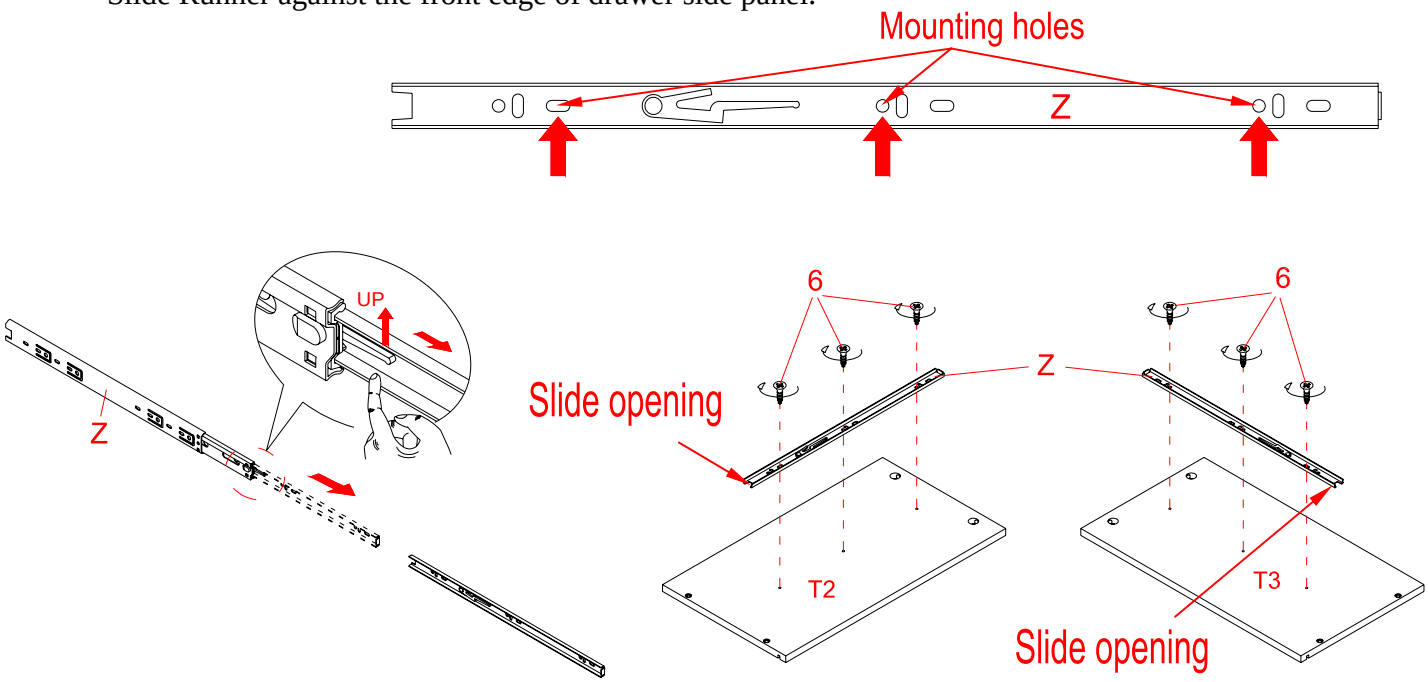

File Drawer Assembling

12. Securely screw 4 Cam Bolts (3) into the designated small holes on the File Drawer Front (T), as shown.

13. Attach File Drawer Side Panels (T2 and T3) to the File Drawer Front (T) by engaging four Small Cam Locks (1). Make sure that the grooves face inward and line up with each other.

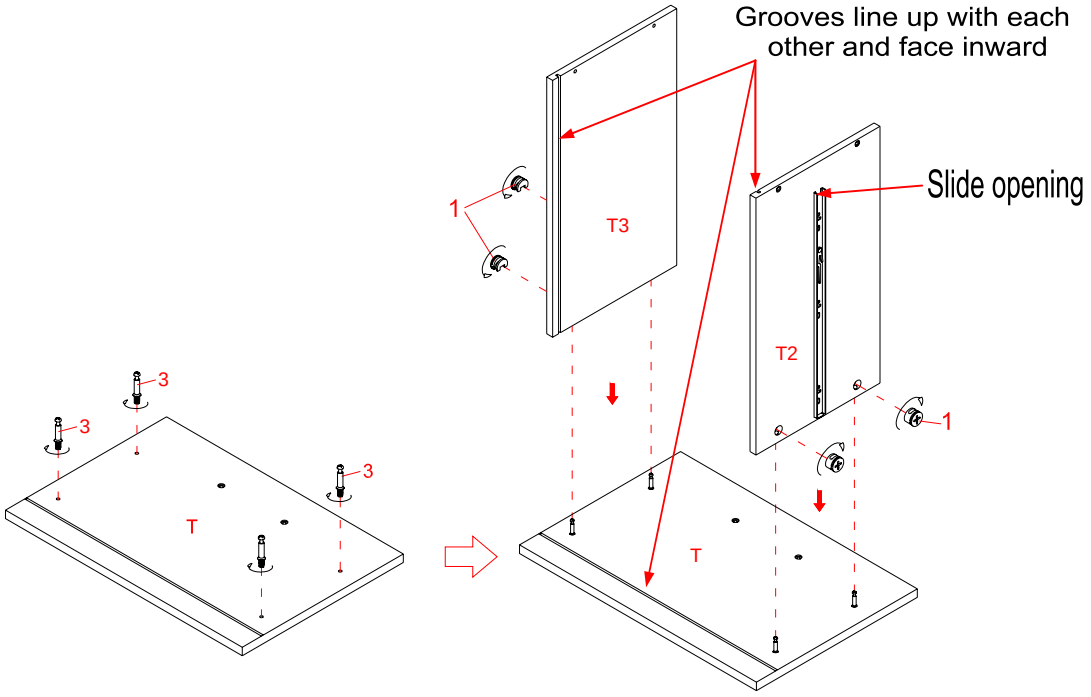

14. Slide the File Drawer Bottom Panel (T4) into the grooves between the Drawer Side Panels (T2 and T3) until fully inserted into the File Drawer Front (T). Make sure the finished surface will face up.

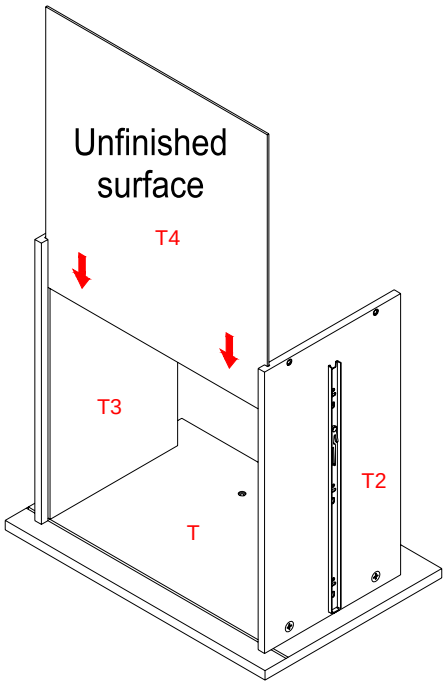

File Drawer Assembling

15. Fasten the File Drawer Back Panel (T1) to File Drawer Side Panels (T2 and T3) using four 1-1/4” Wood Screws (7). Make sure that Drawer Bottom Panel (T4) fits securely into the groove of the Drawer Back Panel (T1). Tighten all the screws with a Phillips screwdriver.

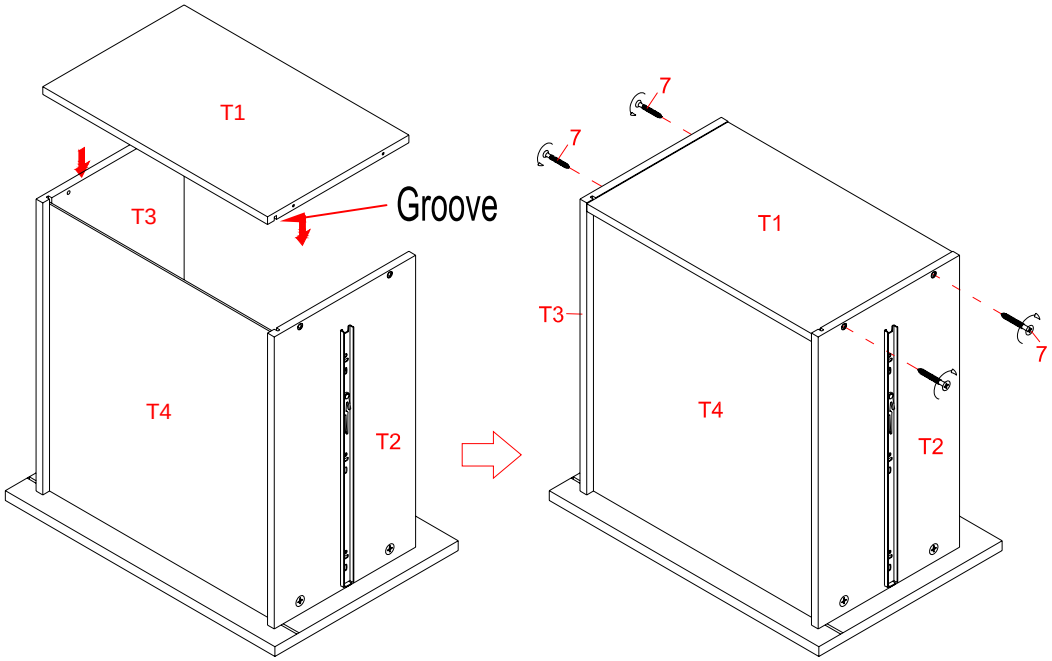

16. Turn the assembled drawer upright. Fit the Guide Rails (U) onto the File Drawer Side Panels (T2 and T3) with the high side facing inward.

17. Hook 2 Guide Blocks (W) onto the high edge of each Guide Rail (U). Now, set the File Hanger (V) into the slot of each pair Guide Blocks (W). Slide the File Plates forward and backward to keep hanging files organized.

18. Attach a Drawer Handle (12) to the outside of the File Drawer Front (T) using two Handle Bolts (13).

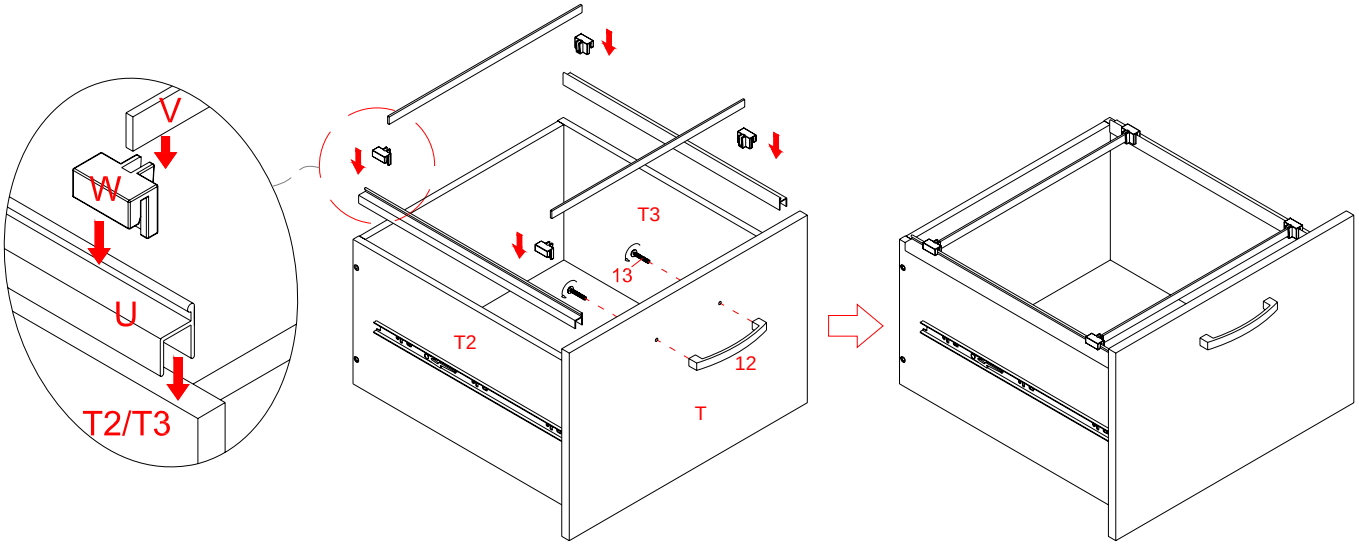

Assembly Instructions

19. Locate the Pull-out Tray Molding (N1) and the Sliding Shelf Molding (O1) and securely screw the Cam Bolts (3) into the designated small holes, as shown in the illustration.

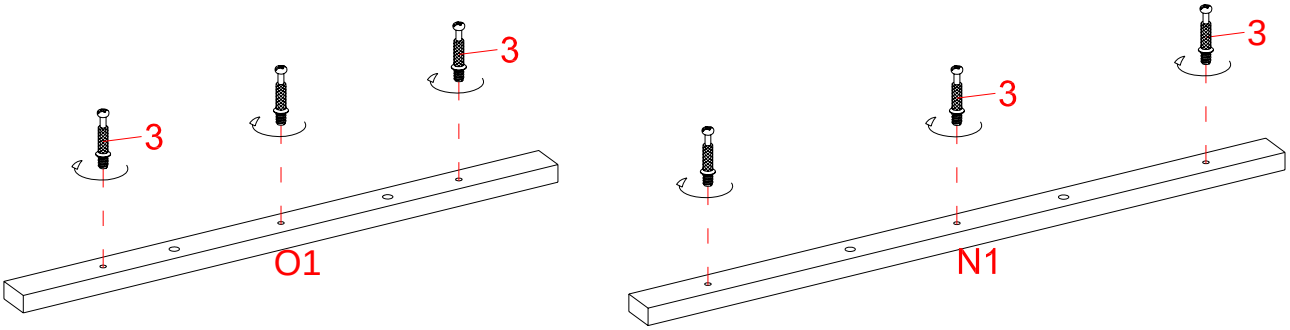

20. Insert two Wood Dowels (4) into the inner end holes of the Sliding Shelf (O). Tap in with a rubber mallet, if necessary. Make sure that you use a small amount of glue with both ends of all dowels.

    NOTE: It is very important to use a small amount of glue on both ends of dowels.

21. Align the drilled holes on the Sliding Shelf Front Molding (O1) with the inserted Wood Dowels (4) on the Sliding Shelf (O), and then press them together. Secure the Sliding Shelf Front Molding (O1) in place by engaging three Large Cam Locks (2). As shown.

22. Repeat last two steps to attach the Pull-out Tray Front Molding (N1) to the Pull-out Tray (N).

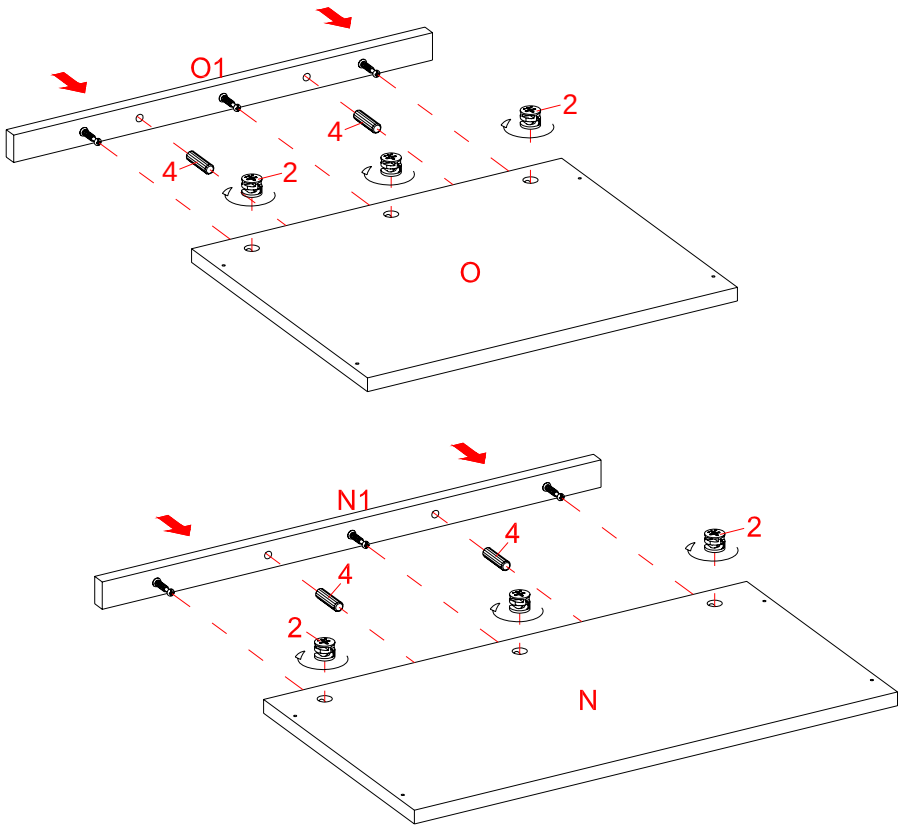

Assembly Instructions

23. Pick up 14” Left and Right Sliding Shelf Slides (YL and YR) and separate the Slide Runners for the following step. Extend the Slide Runner all the way forward. Press the plastic release lever of the slides up and pull the Slide Runner complete out.

24. With the pilot holes as a guide, attach the separated Left and Right Slide Runners (YL and YR) to the bottom of Sliding Shelf (O) using four 1/2” Black Screws (6) through the metal tabs and screw into the pilot holes. Ensure the closed end of the slides points towards the sliding shelf front molding.

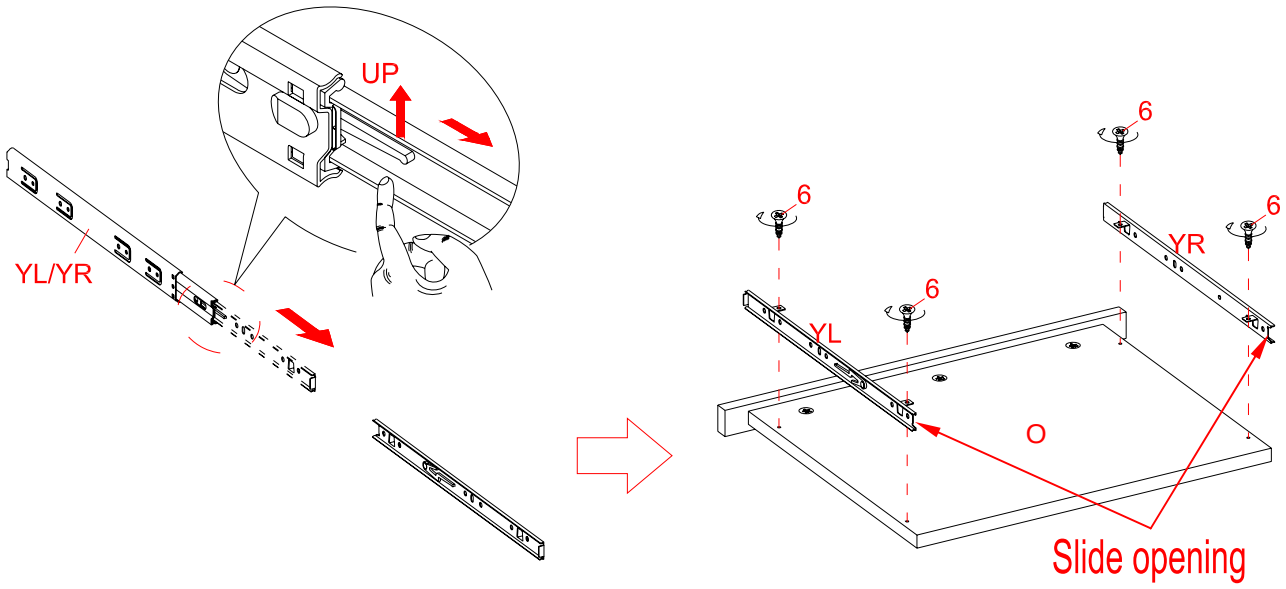

25. Apply the same technique to attach the 12” Pull-out Tray Slides (XL and XR) to the Pull-out Tray (N). As shown below.

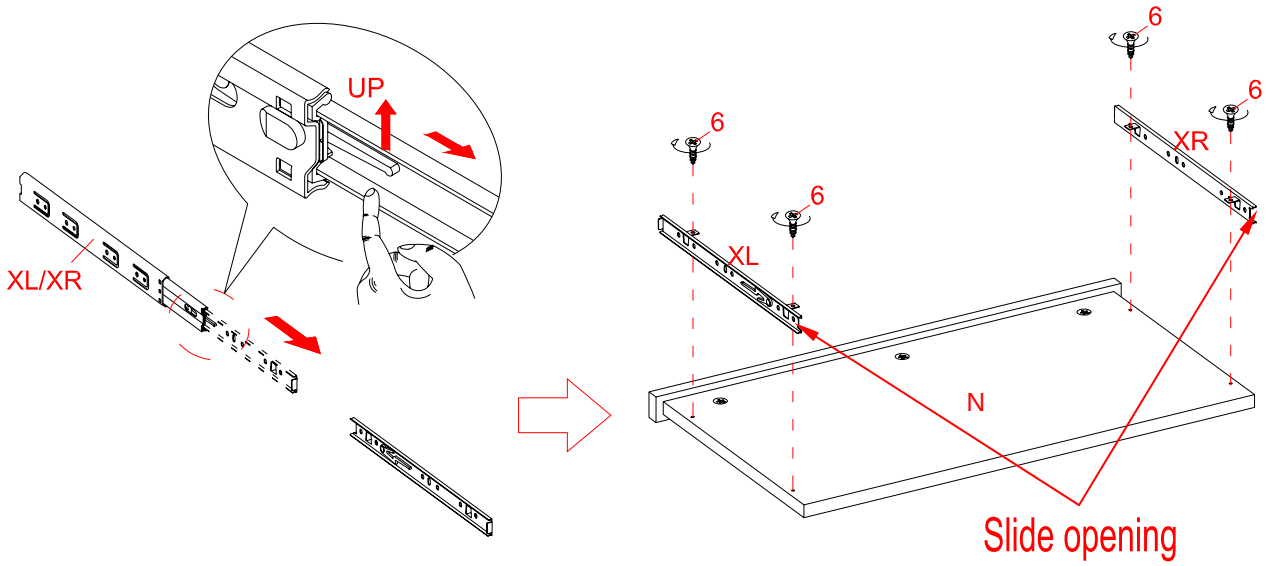

Assembly Instructions

26. Locate the Desk Top (A), the Left Pedestal Side Panels (B and C) and the Right Pedestal Side Panels (H and I) and securely screw the Cam Bolts (3) into the designated small holes, as shown in the illustration.

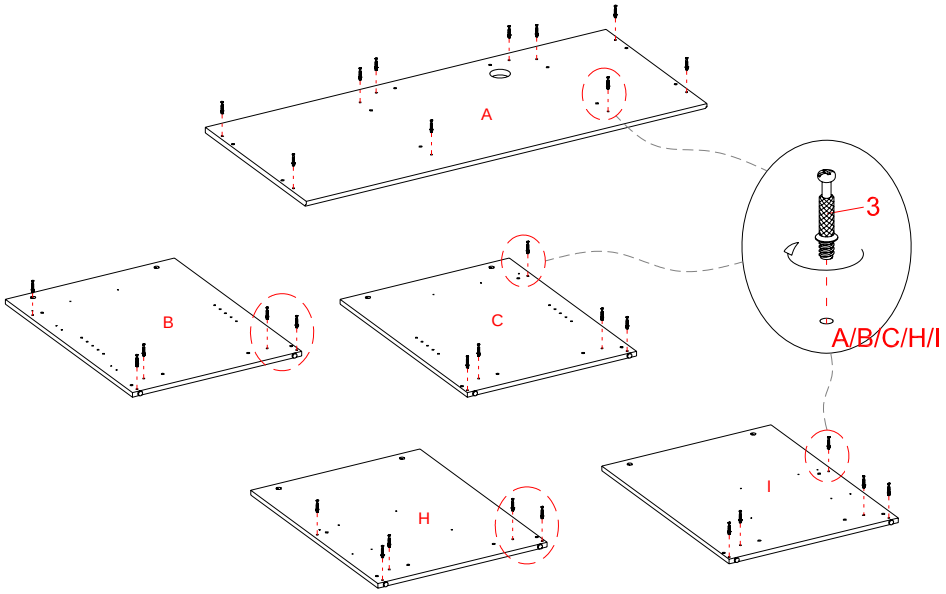

27. With the pilot holes as a guide, fasten two Hinge Bases (14) to the Left Pedestal Left Side Panel (B), using two 1/2" Zinc Screws (5) per hinge. As shown. Make sure that the slot on the top of Hinge Base faces the closest edge.

28. With the pilot holes as a guide, align and attach the Left Slide Tracks (CL) to the Left Pedestal Left Side Panel (B) using three 1/2" Black Screws (6) through the small holes on the Track and screw into place. Make sure the roller end of Slide Track faces forward. Tightly fasten with a Phillips screwdriver.

29. Repeat last step to attach the Right Slide Tracks (CR) to the Left Pedestal Right Panel (C).

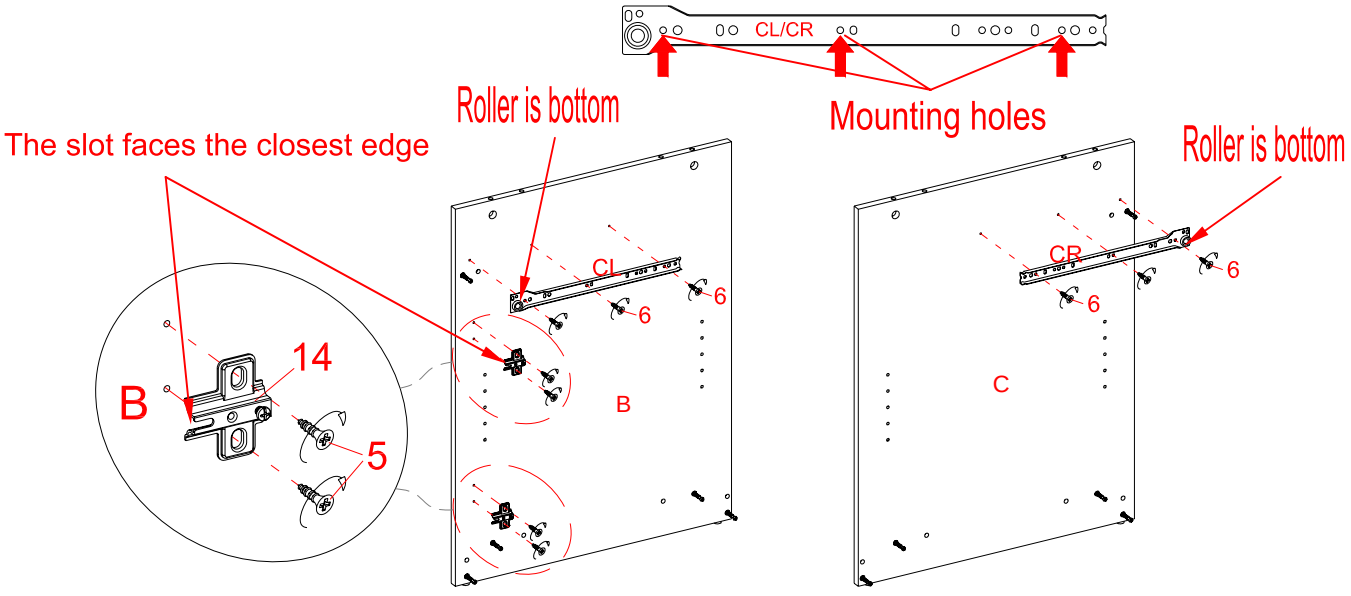

Assembly Instructions

30. Using the pilot holes as a guide, attach the separated Slide Tracks (YL, YR and Z) to the Right Pedestal Left and Right Side Panels (H and I) respectively with three 1/2" Black Screws (6) per slide track. Ensure the slide opening faces the closest edge. Tightly fasten with a Phillips screwdriver.

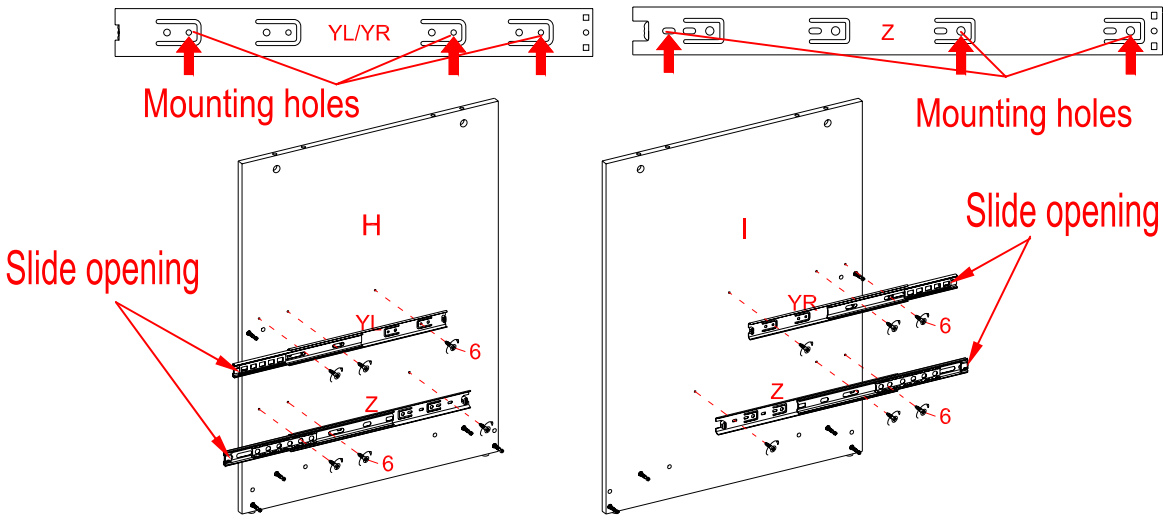

31. Fasten the Left Pedestal Bottom Stretchers (E) to the Left Pedestal Bottom Panel (D) using two Wood Dowels (4) in each. Make sure that the Cam Lock holes face inward.
32. Pick up last assembly and attach it to the Left Pedestal Right Panel (C) using four Wood Dowels (4) and four Large Cam Locks (2). Make sure that the finished edge on the Bottom Panel (D) will face the front of the unit. As shown.
33. Align and attach Left Pedestal Middle Crossbar (F) to the Left Pedestal Right Panel (C) using one Wood Dowel (4) and one Large Cam Lock (2). Ensure the Cam Locks will face the floor.
34. Repeat last two steps to attach the Left Pedestal Left Panel (B) at the other end.

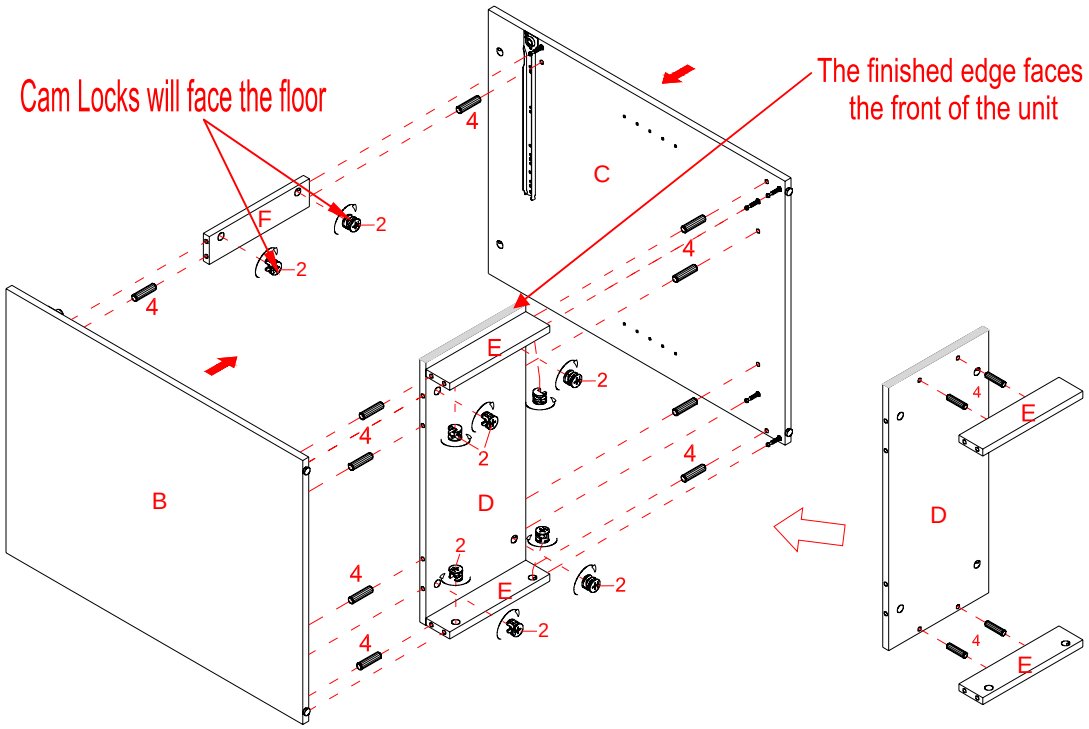

Assembly Instructions

35. Securely screw 2 Cam Bolts (3) into the designated small holes on the Right Pedestal Bottom Panel (J), as shown in the illustration.

36. Align and attach the Right Pedestal Bottom Stretchers (K) to the Right Pedestal Bottom Panel (J) using two Wood Dowels (4) and one Large Cam Lock (2) in each. Make sure that the Cam Locks face inward.

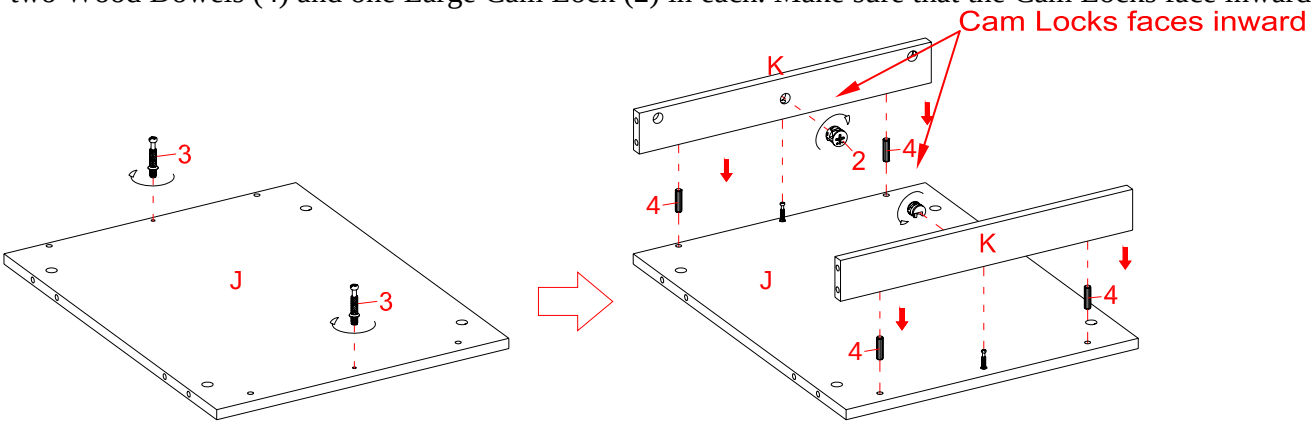

37. Pick up last assembly and attach it to the Right Pedestal Right Panel (I) using four Wood Dowels (4) and four Large Cam Locks (2). Make sure that the finished edge on the Right Pedestal Bottom Panel (J) will face the front of the unit. As shown.

38. Align and attach Right Pedestal Middle Crossbar (L) to the Right Pedestal Right Panel (I) using one Wood Dowel (4) and one Large Cam Lock (2). Ensure the Cam Locks point towards the bottom of the unit.

39. Repeat last two steps to attach the Right Pedestal Left Panel (H) at the other end.

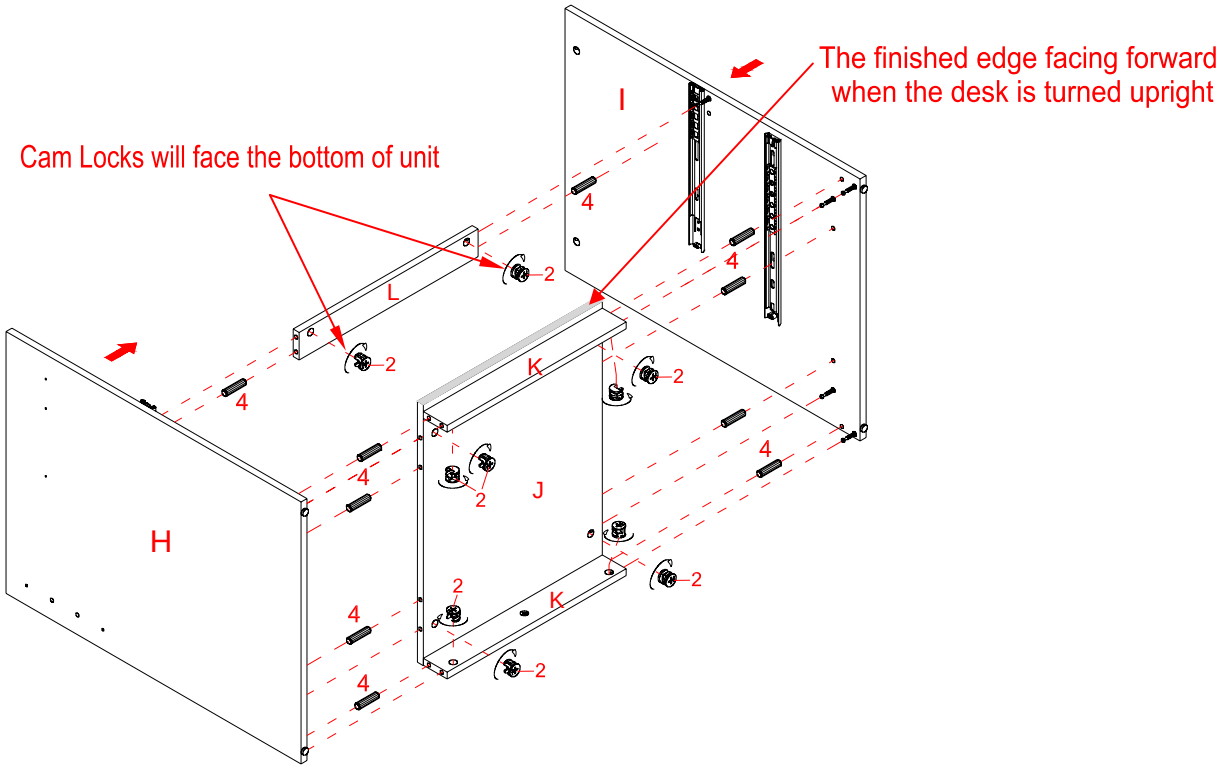

Assembly Instructions

40. Attach the separated 12” Slide Tracks (XL and XR) to the Left Pedestal Right Panel (C) and the Right Pedestal Left Panel (H) respectively with three 1/2” Black Screws (6) per slide track. Ensure the slide opening points towards the front of the unit.

41. Securely screw the Cam Bolts (3) into the designated small holes on the Left Pedestal Right Panel (C) and the Right Pedestal Left Panel (E), as shown in the illustration.

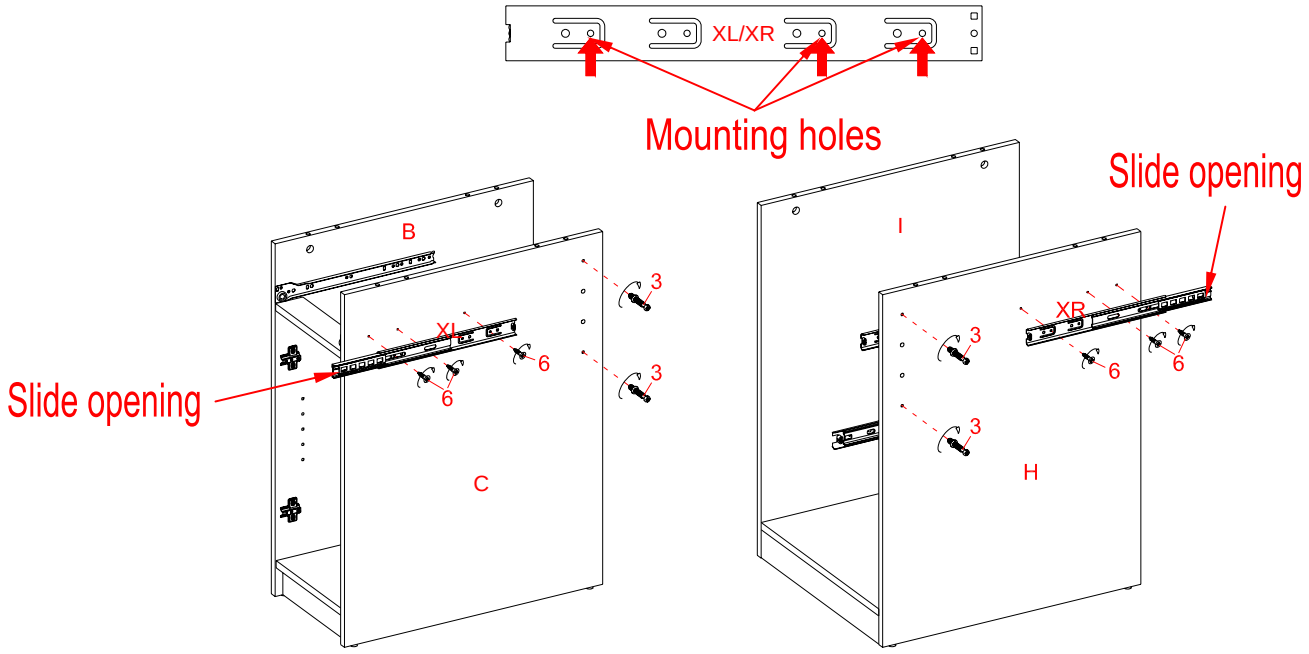

42. Attach the Modesty Panel (P) between the assembled Left and Right Pedestals using four Wood Dowels (4) and four Large Cam Locks (2). As shown. Make sure that the Cam Locks point backwards and the cut-out of the Modesty Panel is up.

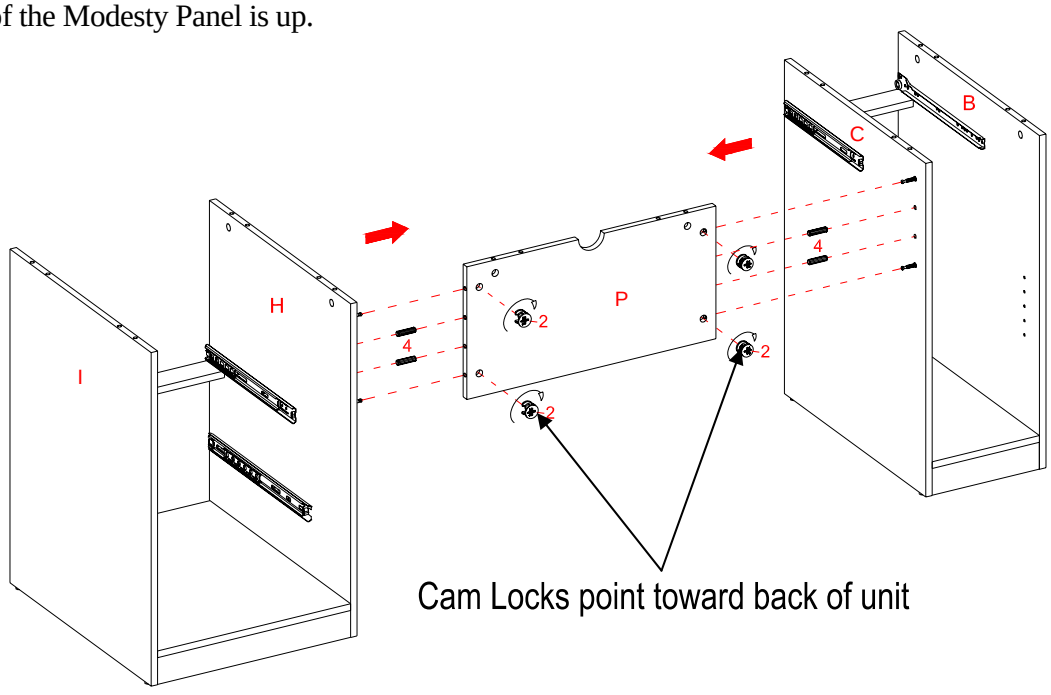

Assembly Instructions

43. Insert ten Wood Dowels (4) into the top inner holes of the assembled unit. DO NOT put dowels into the Cam Bolt holes. Position the Desk Top (A) onto the inserted Wood Dowels (4) and attach it in place by engaging ten Large Cam Locks (2).

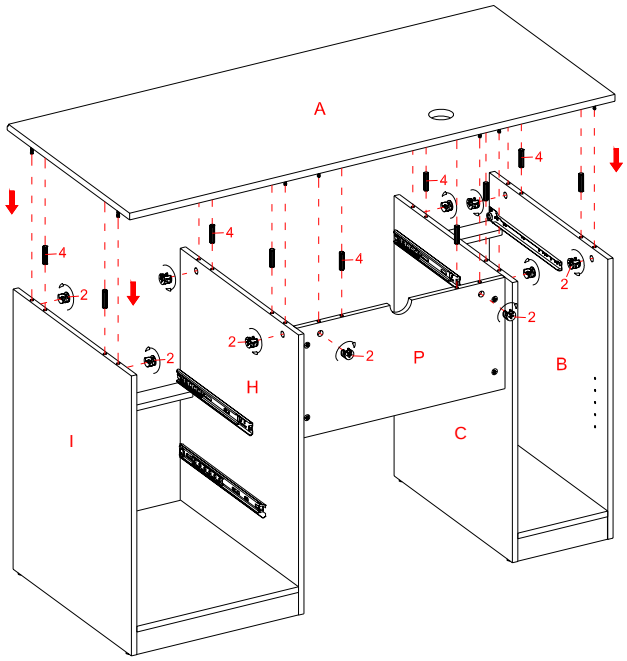

44. Now, go back and tighten all Cam Locks and Screws. Make sure that all the parts are tight and there are no gaps between the pieces. This will help keep the unit square.

45. Align and attach the Pedestal Back Panels (G and M) onto the assembled unit with the stained surface facing backward. As shown. Make sure that the overlaps on the panels are even all the way around. Gently hammer the 3/4" Ring Shank Nails (8) through the pre-drilled holes on the Back Panels.
NOTE: We recommend attaching the back panels with the Ring Shank Nails at the corners first.

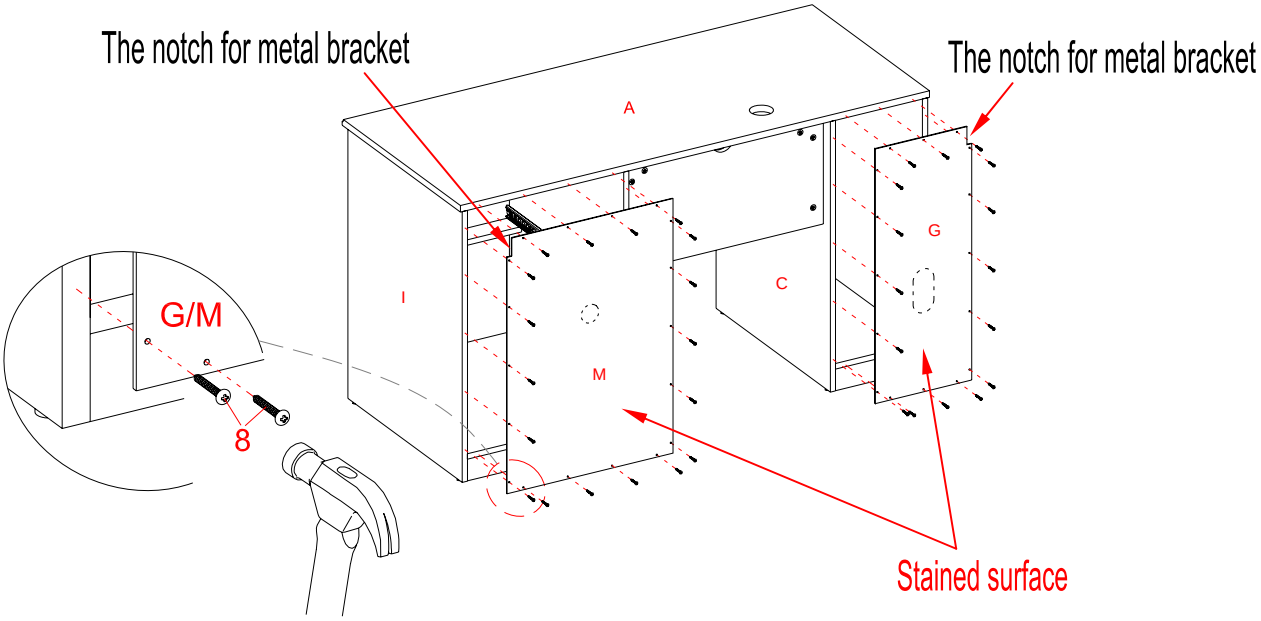

Assembly Instructions

46. Extend the Hinges Arms (14) and rest the Hinge Cups onto the cutouts of the Desk Door Panel (Q). Secure the Hinge Arms in place by using two 1/2" Zinc Screws (5) in each.
47. Attach the Handle (12) to the front side of Door Panel (Q) with the provided Handle Bolts (13).
48. Pick up the Door Panel (Q) and attach the extended Hinge Arms to the Hinge Bases installed on the Left Pedestal Left Panel (B). Loosen the bolt on the back of Hinge Base for an easy fit. Align and insert the "U" slot on Hinge Arm under the bolt head on the back of Hinge Base. Make sure that both door hinges engage and function properly. Tighten the bolt on the Hinge Base to lock the hinges in place.
49. Open and close the door to make sure it is aligned and shut correctly. If necessary, adjust the screws for a good fit.

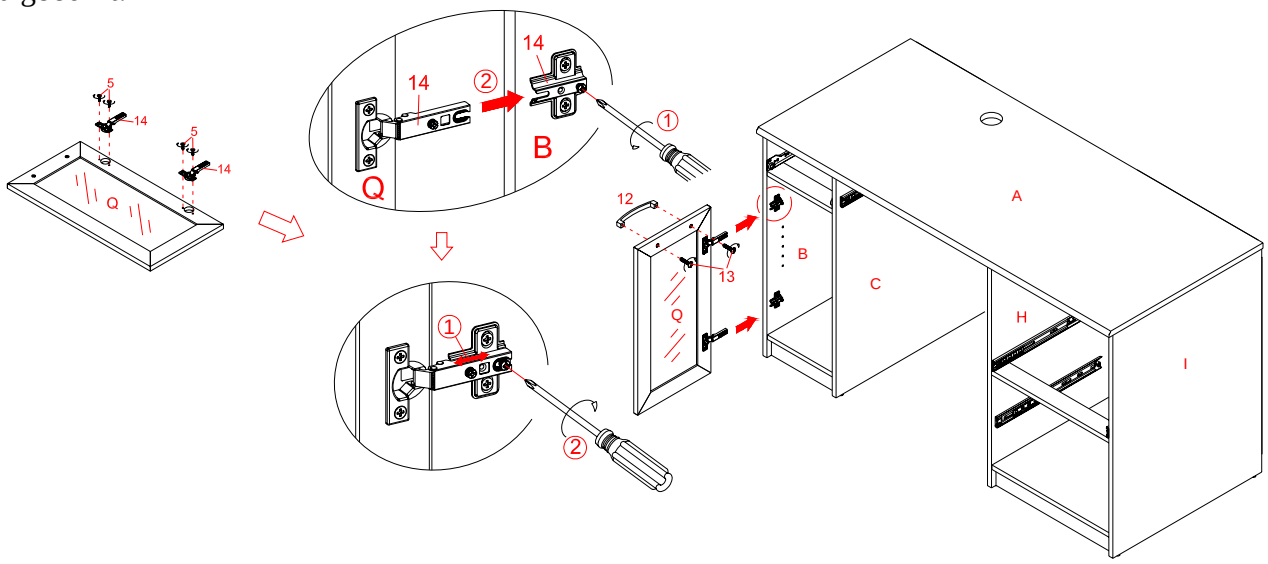

50. Insert the Shelf Pins (9) into the desired holes on the Left Pedestal Side Panels (B and C). Make sure you place the four Shelf Pins in the same level so the shelf is not tilted. Tilt and rest the Adjustable Shelf (R) onto the Shelf Pins (9) with the finished edge facing forward. Make sure that the end notches of the Shelf fit onto the Shelf Pins properly. As shown.
51. Feed the cable of the USB Hub (11) through the large hole on Desk Top (A) and push the hub over the top hole.

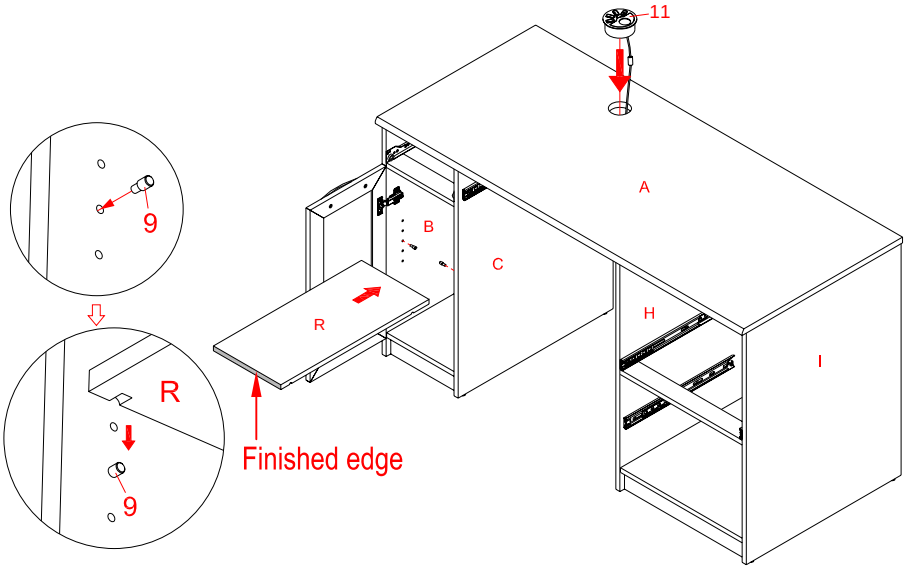

Assembly Instructions

52. Plug the Cam Lock Covers (10) onto the visible Cams Locks o to conceal the Cam Locks.

53. Extend the 16” Ball Bearing Slide Tracks on the pedestal side panels all the way forward (including ball bearing cart). Align the Slide Runners on the File Drawer with the Slide Tracks and push the drawer carefully inside until it stops.

    NOTE: If the drawer does not go in smoothly, please take it out and repeat the step. If you need to remove the drawer, please pull the drawer all the way out, then simultaneously push the plastic release lever of the ball bearing slides up on one side and down on the other side, and then pull it completely out.

54. Repeat the same procedure to install the Pull-out Tray (N) and Sliding Shelf (O) in the frame.

55. To insert the assembled utility drawers into place, tip the front of drawer down and drop the rollers of the drawer Slide Runners behind the rollers of Slide Tracks on the unit. Lift the front of the drawer up and slide it into the unit.

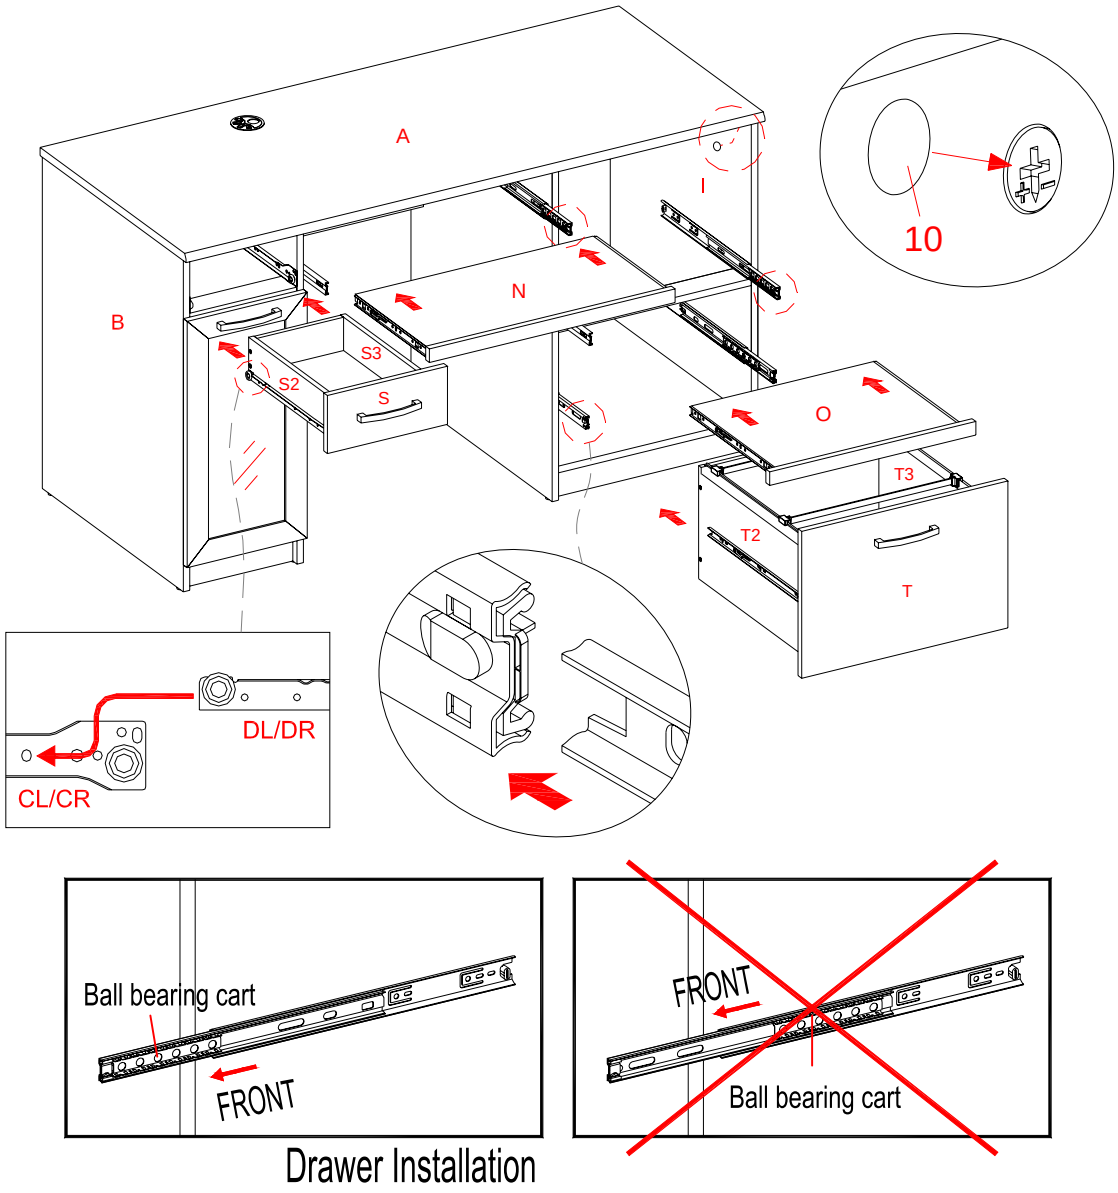

Drawer Installation

Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polish is not necessary. Should you choose to use polish, test first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage your furniture's finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently. Avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- Stains or marks from crayons or ink markers will be difficult to remove.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.
- Check bolts/screws periodically and tighten them if necessary.

Further advice about wood furniture care

It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.

A Touch-up Pen has been provided to repair any small nicks or scratches that may occur during assembly or shipping.

We hope you enjoy your purchase for many years.
Thank you for your purchase!

QUALITY GUARANTEE

We are confident that you will be delighted with your Whalen Furniture purchase.

Should this product be defective in workmanship or materials or fail under normal use, we will repair or replace it for up to one (1) year from date of purchase. Every Whalen Furniture product is designed to meet your highest expectations. We guarantee that you will immediately see the value of our fine furniture.

This warranty gives you specific legal rights and you may also have other rights which vary from province to province (state to state).

Customer Service: 1-866-942-5362
8:30 a.m. - 4:30 p.m. PST, Monday to Friday

www.whalenfurniture.com

IF YOU NEED TO ORDER ANY REPLACEMENT PARTS, PLEASE USE THE LIST BELOW

Greenwich Computer Desk with Hutch (SPCA-GDH)

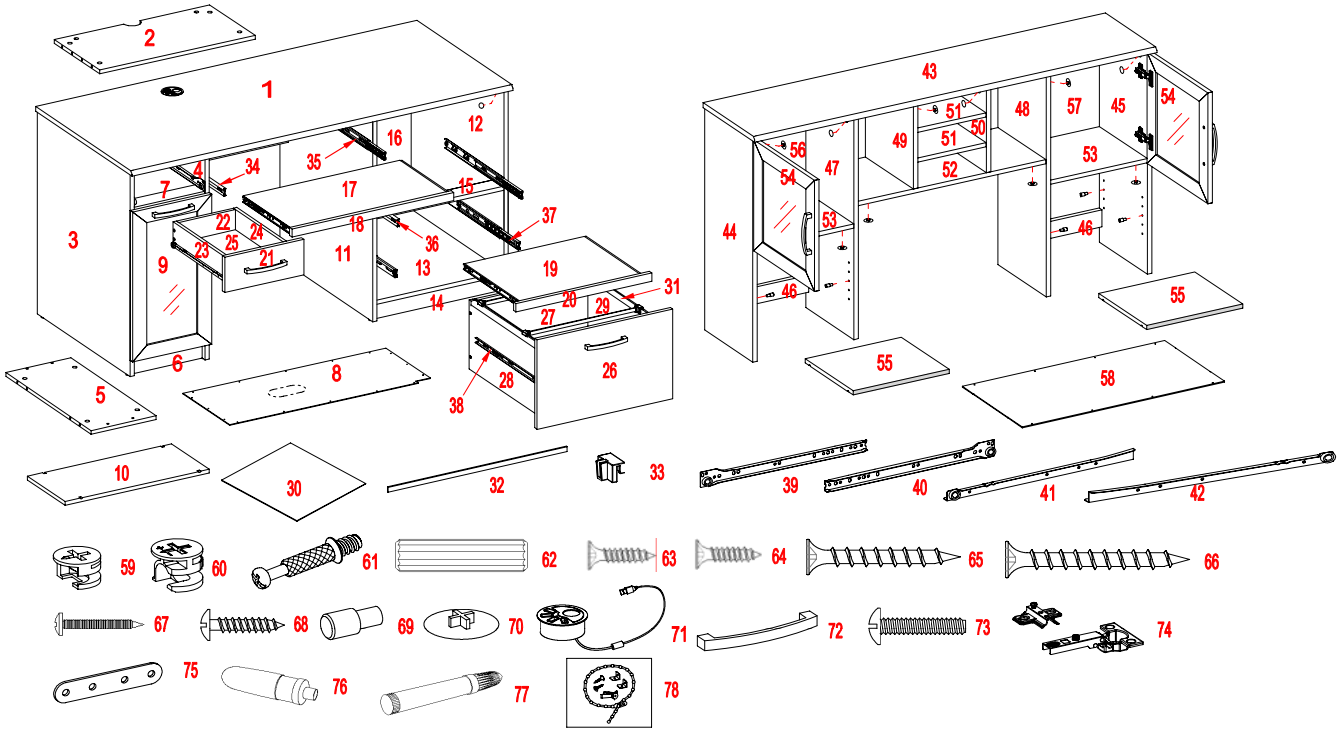

*SPCA-GDH-1-DT	Desk Top	*SPCA-GDH-28-FDLS	File Drawer Left Side	*SPCA-GDH-54-HDP	Hutch Door Panel
*SPCA-GDH-2-MP	Modesty Panel	*SPCA-GDH-29-FDRS	File Drawer Right Side	*SPCA-GDH-55-HAS	Hutch Adjustable Shelf
*SPCA-GDH-3-LPLP	Left Pedestal Left Panel	*SPCA-GDH-30-FDBP	File Drawer Bottom Panel	*SPCA-GDH-56-HLBP	Hutch Left Back Panel
*SPCA-GDH-4-LPRP	Left Pedestal Right Panel	*SPCA-GDH-31-GR	Guide Rail	*SPCA-GDH-57-HRBP	Hutch Right Back Panel
*SPCA-GDH-5-LPBP	Left Pedestal Bottom Panel	*SPCA-GDH-32-FH	File Hanger	*SPCA-GDH-58-HMBP	Hutch Middle Back Panel
*SPCA-GDH-6-LPBS	Left Pedestal Bottom Stretcher	*SPCA-GDH-33-GB	Guide Block	*SPCA-GDH-59-SCL	Small Cam Lock
*SPCA-GDH-7-LPMC	Left Pedestal Middle Crossbar	*SPCA-GDH-34-12PTLS	12” Pull-out Tray Left Slides	*SPCA-GDH-60-LCL	Large Cam Lock
*SPCA-GDH-8-LPBP	Left Pedestal Back Panel	*SPCA-GDH-35-12PTRS	12” Pull-out Tray Right Slides	*SPCA-GDH-61-CB	Cam Bolt
*SPCA-GDH-9-DDP	Desk Door Panel	*SPCA-GDH-36-14SSLS	14” Sliding Shelf Left Slides	*SPCA-GDH-62-M8x30WD	M8 x30 mm Wood Dowel
*SPCA-GDH-10-DAS	Desk Adjustable Shelf	*SPCA-GDH-37-14SSRS	14” Sliding Shelf Right Slides	*SPCA-GDH-63-1/2ZS	#6 x 1/2" Zinc Screw
*SPCA-GDH-11-RPLP	Right Pedestal Left Panel	*SPCA-GDH-38-16BBS	16” Ball Bearing Slides	*SPCA-GDH-64-1/2BS	#6 x 1/2" Black Screw
*SPCA-GDH-12-RPRP	Right Pedestal Right Panel	*SPCA-GDH-39-LST	Left Slide Track	*SPCA-GDH-65-1 1/4S	#8 x 1-1/4” Screw
*SPCA-GDH-13-RPBP	Right Pedestal Bottom Panel	*SPCA-GDH-40-RST	Right Slide Track	*SPCA-GDH-66-1 1/2S	#8 x 1-1/2” Screw
*SPCA-GDH-14-RPBS	Right Pedestal Bottom Stretcher	*SPCA-GDH-41-LSR	Left Slide Runner	*SPCA-GDH-67-3/4”RSN	3/4” Ring Shank Nail
*SPCA-GDH-15-RPMC	Right Pedestal Middle Crossbar	*SPCA-GDH-42-RSR	Right Slide Runner	*SPCA-GDH-68-5/8S	#6 x 5/8” Screw
*SPCA-GDH-16-RPBP	Right Pedestal Back Panel	*SPCA-GDH-43-HTP	Hutch Top Panel	*SPCA-GDH-69-SP	Shelf Pin
*SPCA-GDH-17-PT	Pull-out Tray	*SPCA-GDH-44-HLOP	Hutch Left Outer Panel	*SPCA-GDH-70-CLC	Cam Lock Cover
*SPCA-GDH-18-PTM	Pull-out Tray Molding	*SPCA-GDH-45-HROP	Hutch Right Outer Panel	*SPCA-GDH-71-USBH	USB Hub
*SPCA-GDH-19-SS	Sliding Shelf	*SPCA-GDH-46-HBS	Hutch Bottom Stretcher	*SPCA-GDH-72-H	Handle
*SPCA-GDH-20-SSM	Sliding Shelf Molding	*SPCA-GDH-47-HLIP	Hutch Left Inner Panel	*SPCA-GDH-73-HB	Handle Bolt
*SPCA-GDH-21-UDF	Utility Drawer Front	*SPCA-GDH-48-HRIP	Hutch Right Inner Panel	*SPCA-GDH-74-DH	Door Hinge
*SPCA-GDH-22-UDBP	Utility Drawer Back Panel	*SPCA-GDH-49-HLPP	Hutch Left Partition Panel	*SPCA-GDH-75-MB	Metal Bracket
*SPCA-GDH-23-UDLS	Utility Drawer Left Side	*SPCA-GDH-50-HRPP	Hutch Right Partition Panel	*SPCA-GDH-76-G	Glue
*SPCA-GDH-24-UDRS	Utility Drawer Right Side	*SPCA-GDH-51-HSFS	Hutch Small Fixed Shelf	*SPCA-GDH-77-TUP	Touch-up Pen
*SPCA-GDH-25-UDBP	Utility Drawer Bottom Panel	*SPCA-GDH-52-HLFS	Hutch Large Fixed Shelf	*SPCA-GDH-78-TRHK	Tipping Restraint Hardware Kit
*SPCA-GDH-26-FDF	File Drawer Front	*SPCA-GDH-53-HMFS	Hutch Medium Fixed Shelf	*SPCA-GDH-CHH	Complete Hardware for Hutch
*SPCA-GDH-27-FDBP	File Drawer Back Panel			*SPCA-GDH-CHD	Complete Hardware for Desk